OPOLAR

Windhole 1

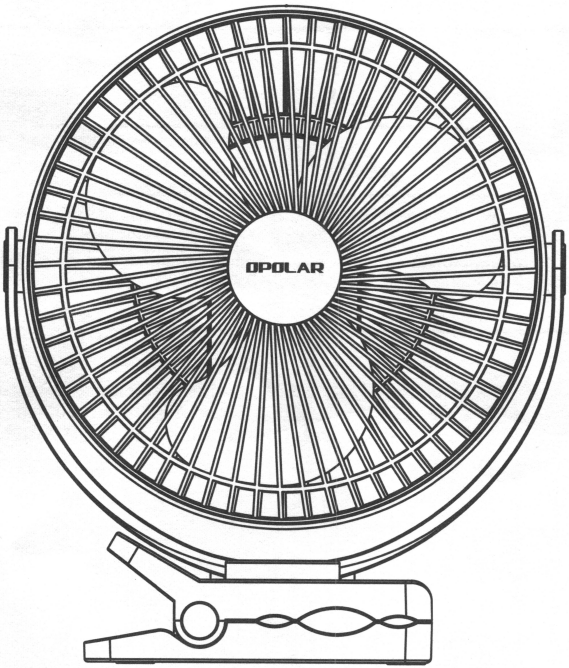

OPOLAR

Windhole 1

日本語 P1- P5

English P6- P10

中文 P11- P13

OPOLAR | Windhole 1

クリップ式扇風機

取扱説明書

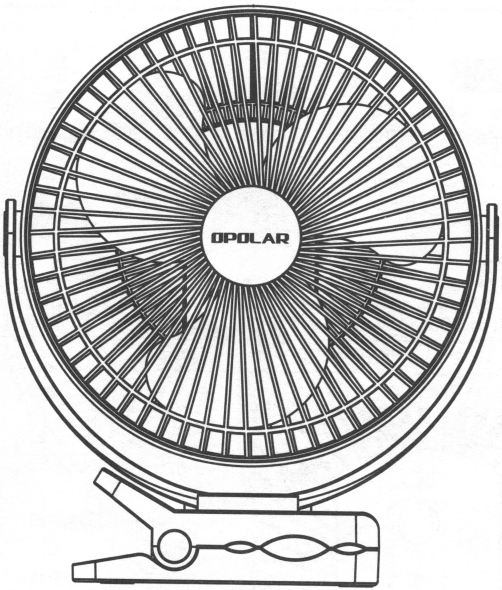

この度はお買い上げいただきまして、まことにありがとうございました。
この商品を安全に正しくお使いいただくために、ご使用前に「取扱説明書」を最後までお読みください。

ご注意

この取扱説明書は、WH100、WH105、WH110で共用となっています。

モデル	充電池容量
WH100	充電式でない、USB式
WH105	5000mAh
WH110	10000mAh

商品特徴

1. パワフル、3.8m/s
2. 大容量充電池（WH100-充電式でない、WH105-5000mAh、WH110-10000mAh）
3. 急速充電5V/2A
4. 取り外し可能なカバー
5. USB Type-CポートとUSB Microポートを1つずつ搭載

付属品

Micro USBケーブル(Type-Cが付属しない)	1
取扱説明書	1

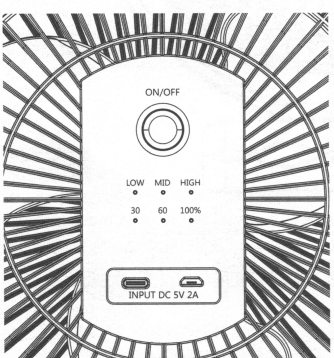

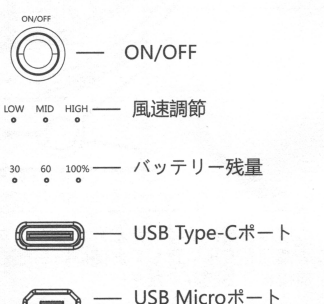

仕様

風量	モーター回転速度	風速	使用時間
スピード1	1350 RPM	2.8M/S	24H
スピード2	1750 RPM	3.6M/S	12H
スピード3	2150 RPM	4.5M/S	6H
スピード4	1350-2150RPM	2.8-4.5M/S	12H

電源	DC5V・ポリマー電池(取り外せない)
電流	2A MAX
電力	10W
風量調節	弱・中・強・自然風
電池仕様	ポリマー電池(10000mAh)
動作温度	-10℃~50℃
保存温度	-20℃~60℃
充電時間	WH105 :3-3.5H(2A急速充電) WH110:6-7H(2A急速充電)
充電指示	LOW スピード1
	MID スピード2
	HIGH スピード3
バッテリー残量	30 60 100%
充電中指示	ライトが点滅
充電完了指示	ライトが点滅を停止する
角度調節	0-360度
材料	ABS
ケーブルの長さ	1M
サイズ	217.5*256*80.5mm
重さ	610G

充電方法

付属のMicro USBケーブルを扇風機のMicro USBポートに接続し、もう片方の端子をコンセントに挿したUSB充電器に接続します。または、付属の充電用USBケーブルをパソコンやモバイルバッテリーなどから手軽に充電できます。 扇風機を正常に充電するためには5V/2A以上の出力ができるUSB充電器をご利用ください。充電時間を短くするためには、扇風機をオフにしてください。

※ 出力が2A以下のものだと、出力不足で充電が遅いです。（PC、2A以下のモバイルバッテリー、2A以下のUSB充電器など）それに、扇風機をオンすらできない恐れがあります。

ご注意

1. 充電中、扇風機を使用すると、扇風機はUSBケーブルで電力を消費します。充電することができません。ご了承ください。
2. 充電機器・本体の仕様によるもの 電流の出力・電圧が扇風機の充電に適していないため、充電が遅くなっている可能性があります。
3. 電池残量がなくなると、扇風機の速度が自動的に遅くなります。
4. 充電池を取り外さないでください。バッテリーをつぶしたり、取り外したりしないでください。環境汚染や爆発の原因となれます。
5. 周囲温度が60℃を超えるとき、充電池の使用は禁止です。
6. 保管の際は、汚れを取り除き、ホコリなどがつかないよう、布などのカバーで覆い、湿気がなく乾燥した清潔な場所に、内蔵バッテリーを満充電にした状態で保管してください。長期間保管の際は、一ヶ月に1回は内蔵バッテリーを充電してください。
7. 運転中は羽根が高速で回転しています。お子様が誤って指などを入れないように、保護者の方が注意してください。

お手入れ

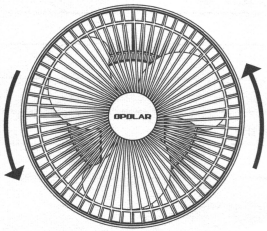

1. 電源を切ってください。
2. 時計回りでロック、反時計回りでロック解除、乾いた布またはティッシュで清掃してください。

廃棄について

廃棄処分をされる場合は、お住まいの各自治体の定めた指示に従い、処分してください。

保証

OPOLARには【1年間保証】付きの対応をさせていただきます。 分解、焼却、浸漬、落下などの場合は、保証の対象外となります。
お気づきの点があれば、どんな小さなことでもお気軽にご連絡くださいませ。

OPOLAR | Windhole 1

Clip On Fan

User Manual

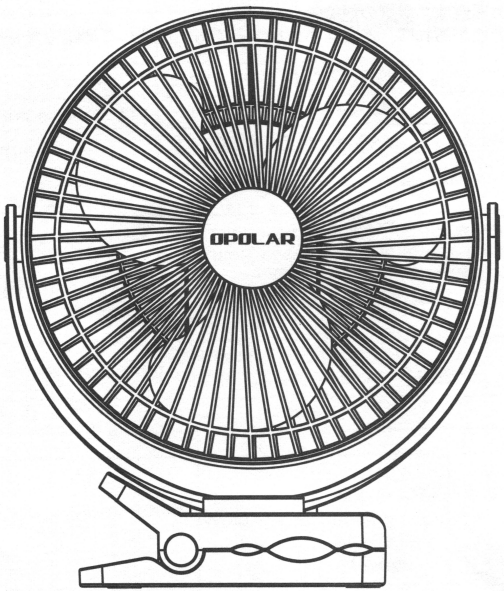

Congratulations on your purchase OPOLAR Windhole1 series clip on fan! Please read this user manual carefully before you use the fan and save it for future reference.

Note

These instructions are used for 3 models of clip fans:

Windhole1 Series Model Number	Battery Capacity
WH100	No battery, powered by USB only
WH105	5000mAh
WH110	10000mAh

Product Feature

1. Extra large wind reaches Max. 4.5m/s.
2. Safety 10W 2A fast charging (only 2 A adapter(not included) has this feature)
3. Removable front frame for easy clean.
4. Dual charging ports (Micro Type-c Port & Micro USB Port)

What's in the box

If anything is missing in the package, please contact the seller.

Fan	1
Micro USB Cable	1
User Manual	1

Note: Type C cable is not included.

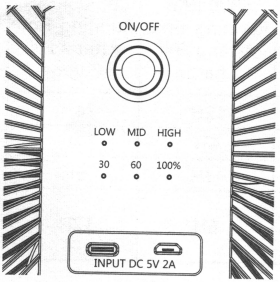

ON/OFF	ON/OFF
LOW MID HIGH	Fan speed
30 60 100%	Battery power indicator (These indicators are suitable for Model WH105, WH110; as for Model WH100, they will stay bright.)
	Type C charging port
	Micro USB charging port

Specifications

Power Supply	DC5V / polymer battery (non-removable)
Input (Micro/Type C)	2A MAX
Rated Power	5.5W
Fan Speed	Low-Mid-High-Natural Wind (Energy-saving mode)
Battery Type	10000mAh/5000mAh polymer battery /No Battery
Working Temperature	-10℃~50℃ (14℉~ 122℉)
Storage Temperature	-20℃~60℃ (-4℉~140℉)
Charging Time	WH105: 3-3.5 Hours (If use 2A adapter) WH110: 6-7 Hours (If use 2A adapter)
Battery Power Indicator	30 60 100%
Charging Indicator	Battery power indicator flashes when charging, and stay bright after a full charge.
Adjustable Degree	0-360 degree
Material	ABS
Product Dimensions	L*H*W: 217.5*256*80.5mm L*H*W: 8.7*10*3.2 Inch
Cable Length	1meter / 39 inch

Fan Speed	Motor Rotate Speed	Wind Speed	WH105 5000mAH Running Time After a Full Charge	WH110 10000mAH Running Time After a Full Charge
Low	1350 RPM	2.8M/S	12H	24H
Medium	1750 RPM	3.6M/S	6H	12H
High	2150 RPM	4.5M/S	3H	6H
Natural Wind (Energy-saving Mode)	1350-2150RPM	2.8-4.5M/S	6H	12H

How to Charge

Note: Only 2 A device (adapter, USB outlet even power bank) supports fast charge. The charging time will not meet what we claimed above if a less than 2A device is used.

1. Insert the provided USB cable into the clip fan' s charging port.
2. Connect the cable with a USB outlet, like USB charger, cell phone adapter, laptop, power bank. To fast charge the fan, a 5 V/2 A adapter is suggested to use.

Notes:

* When using 2A USB outlet, it supports charging while working.
* If you use 1A or less than 1A USB Outlet, the fan cannot be charged while working. Please turn off the fan to charge it fully.
* The fan will automatically slow down to protect the device when it is in low power.
* Battery' s lifetime would be shortened if you keep it in a humid environment.

Cautions:

* Batteries are NON-REMOVABLE, hence, please DO NOT extrude or disassemble the battery. Doing this might lead to the environmental pollution even explosion.
* It is strictly PROHIBITED to use the battery when the ambient temperature is over 50 ℃/140℉.
* Please charge the battery up to 60% before seasonal storage.
* For your safety, please do not put fingers or any foreign objects into the fan.

Tips: Some USB outlets might have insufficient output current, which will extend the charging time or even stop charging. To shorten the charging time, please turn off the fan, and connect the cable with a 5V/2A USB outlet, like USB charger, cellphone adapter, etc,

How to Clean

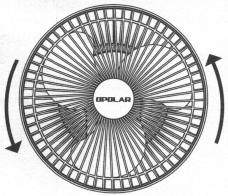

1. Turn off the fan.
2. Rotate the fan's front frame counterclockwisely to take off the frame.
3. Clean the fan with dry clean cloth. (The fan is not waterproof, don't put it into water)

Notice: Cleaning and maintenance shall not be made by children without supervision.

Warranty

To ensure that we meet your needs, we offers one year warranty from the purchase date for defective products. The incorrect human operation, including disassembling, burning, soaking, and dropping, are not covered in the warranty.

We Need Your Support

We welcome you to POST AN UNBIASED REVIEW on our Amazon product page so that others can be benefited from your experience. As a growing business, we know how precious your time is, so we especially appreciate your time and input. Your support is very important to us! Thanks again!

OPOLAR | Windhole 1

8寸电池夹扇

说明书

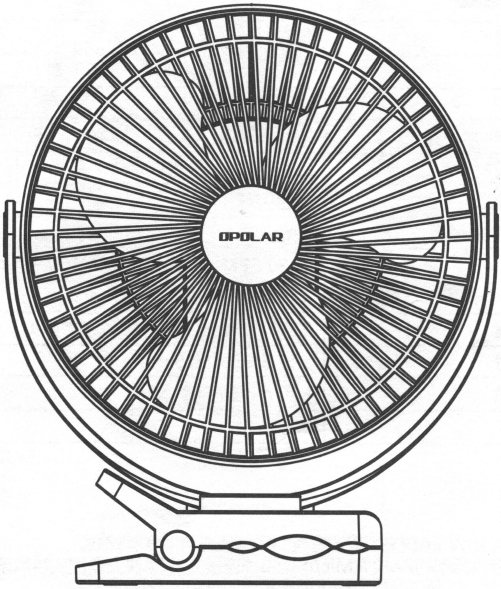

包装

风扇	1
Micro USB线	1
说明书	1

注：如果发现有任何配件缺失，请联系卖方

产品参数

产品型号	风眼1
供电方式	DC 5V USB或者电池（不可拆卸）
电池类型	聚合物锂电池
输入（Micro/Type-C）	2A（Max）
风扇档位	4档（低-中-高-节能模式）
充电指示灯	黄色闪烁
充电完成指示灯	黄色常亮
转速	1350 RPM - 1750 RPM - 2150 RPM
风速	2.8 m/s - 3.6 m/s - 4.5 m/s
摇头角度	720°（左右上下均可手动360°摇头）
产品尺寸	217.5*256*80.5 mm
产品重量	610 g (含电池)
线长	1米

充电

1. 风扇支持10W 2A快充，产品标配1根2A快充Micro USB线。
2. 使用包装内标配的2A快充Micro USB线连接支持2A快充适配头给风扇充电，可达到2A快充，风扇还可边工作边进行充电。（产品不含适配头）
3. 风扇配有Micro USB和Type-C双充电口，客户也可使用自己支持2A快充的手机充电线和适配头给风扇充电，同样也可达到2A。（注意：Micro USB和Type-C不能同时插上充电）
4. 如直接使用USB线插在如电脑USB口或者排插USB口，风扇充电电流只能达到1A，风扇工作时优先使用USB线上的电源，不能边工作边充电，如需充电风扇需停止工作。

清洗

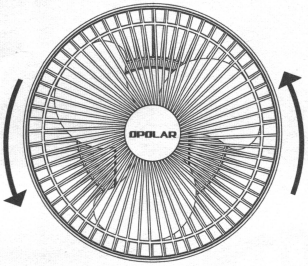

1. 关闭风扇；
2. 逆时针旋转风扇前网，取下前网；
3. 用干净的布擦拭清洁风扇。

注：擦拭风扇前风扇一定要停止工作；风扇不防水，不要放入水中；未经监督，儿童不得进行清洁。

注意事项

1. 10岁以下小孩使用请告知不要将手伸进风扇内，以免划伤；
2. 当风扇电量过低，风速会变低进行保护风扇和电池；
3. 请勿把任何异物放进风扇内；
4. 如长期不用本风扇，务必把电池充满电，把风扇用塑料袋装好，密封贮存于干燥阴凉地方；否则可能导致电池无法充电的情况；
5. 禁止在高于60℃环境下使用本产品；
6. 禁止将产品随意丢弃，禁止丢进火中和高温环境，否则会造成环境污染甚至爆炸。

质保信息

为了给您提供更好的服务和购物体验，消费者通过合法渠道购买的OPOLAR产品，自购买日期起，如果出现非人为原因造成的故障，我们都会提供一年质保（质保范围不包括人为损坏、拆卸燃烧、进水、摔坏等）。

OPOLAR